


# MODEL TS4825

# SPOTNAILS®

DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd  
Rolling Meadows, IL 60008  
Phone : 847-259-1620

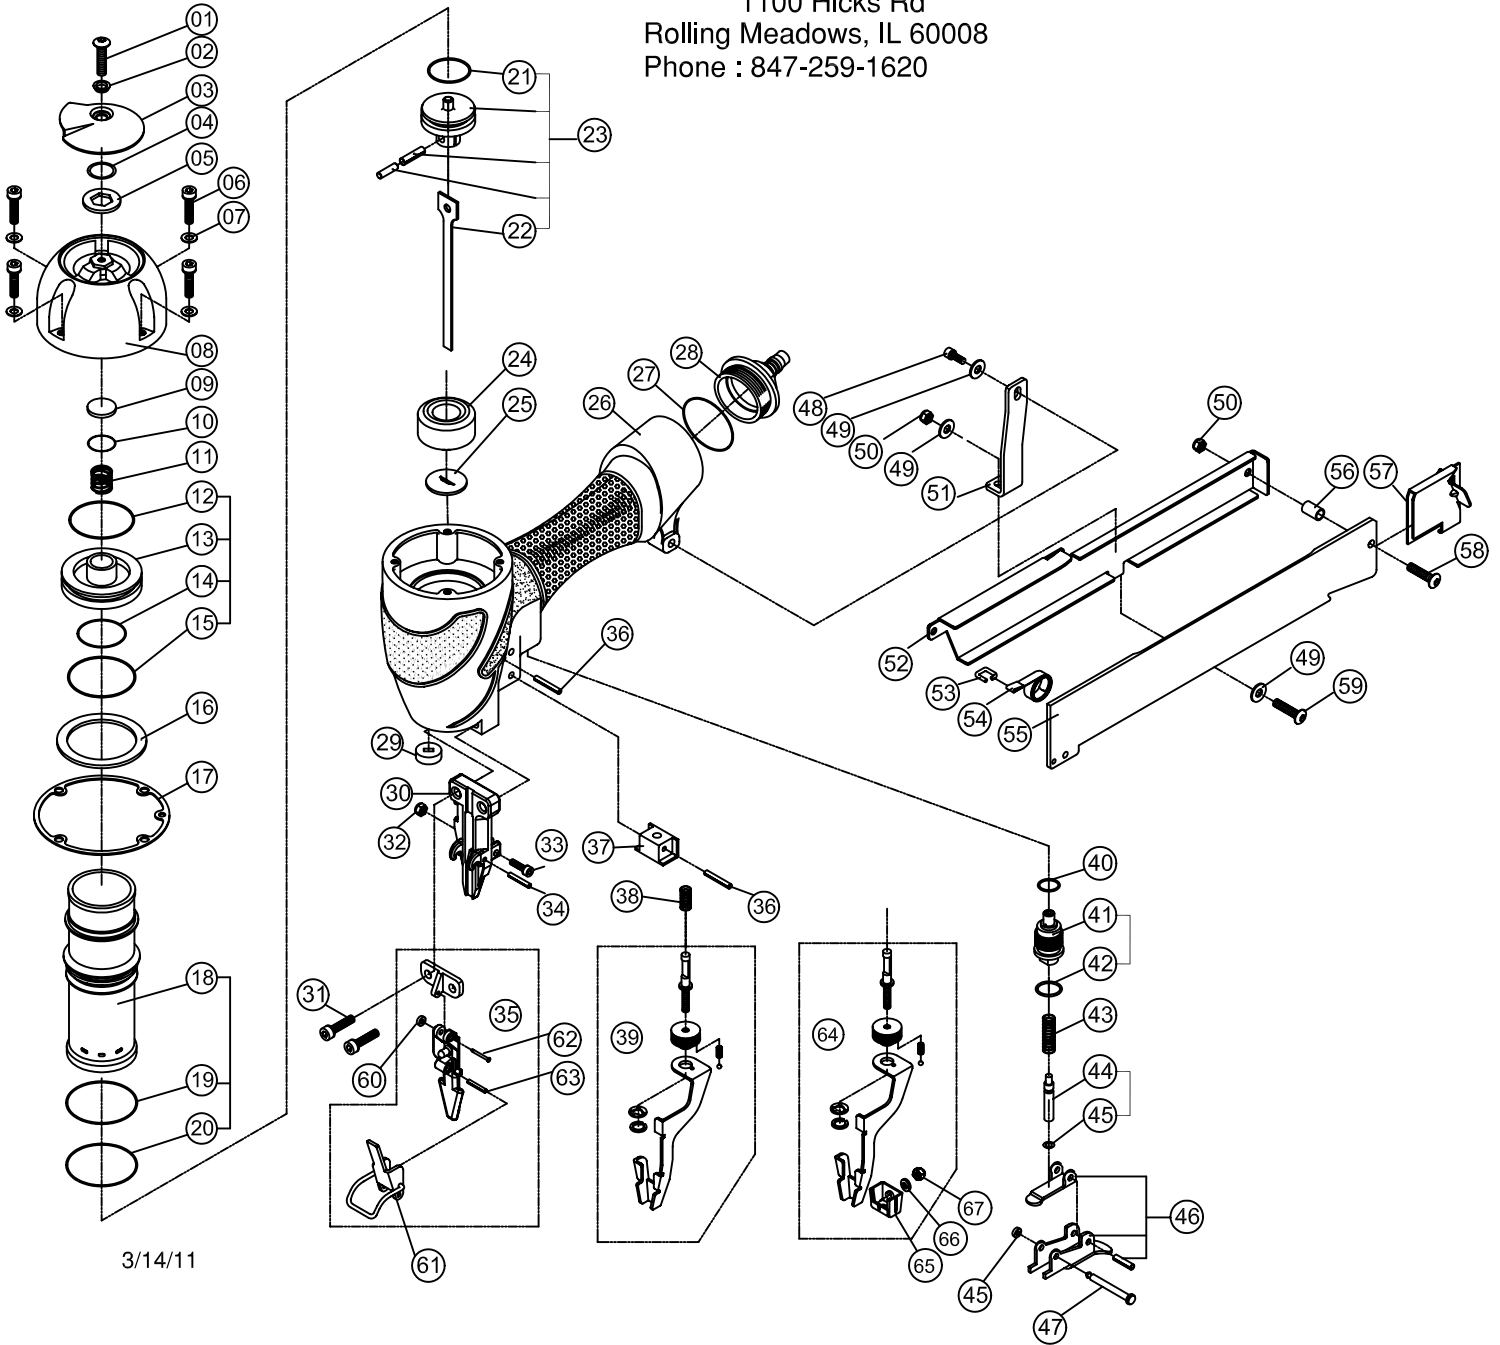

3/14/11

## SPOTNAILS MODEL TS4825

Ref No.	Part No.	Description
01	P-24370	Screw
02	P-96118	Bushing
03	P-70046	Exhaust Deflector
04	P-64377	O-Ring
05	P-32217	Washer
06	P-24358	Cap Screw
07	P-32211	Flat Washer
08	P-60180	Cap
◆	09	P-15193 Exhaust Seal
◆	10	P-64384 O-Ring
◆	11	P-18331 Poppet Spring
◆	12	P-64232 Poppet O-Ring
◆	13	P-63042 Poppet
◆	14	P-64422 Piston Stop O-Ring
◆	15	P-64467 Cylinder Seal O-Ring
◆	16	P-03081 Guide Spacer
◆	17	P-62079 Gasket
◆	18	P-05106 Cylinder
◆	19	P-64235 Cylinder O-Ring
◆	20	P-64423 O-Ring
◆	21	P-64424 Piston O-Ring
◆	22	P-06244 Driver Blade
◆	23	AS-06064 Piston & Driver Assembly
◆	24	P-15121 Bumper
◆	25	P-15124 Return Seal
◆	26	P-01271 Body
◆	27	P-64425 O-Ring
◆	28	P-60175 End Cap
◆	29	P-15196 Return Seal
◆	30	P-08485 Wear Plate
◆	31	P-24300 Screw
◆	32	P-26125 Nut
◆	33	P-24452 Screw
◆	34	P-07239 Pin

Ref No.	Part No.	Description
35	AS-10051	Front Plate Assembly
36	P-07262	Pin
37	P-53165	Safety Guide
38	P-18328	Spring
39	AS-53057	Safety Assembly
◆	40	P-64239 O-Ring
◆	41	P-22114 Bleeder Valve
◆	42	P-64241 O-Ring
◆	43	P-18227 Spring
◆	44	P-22179 Plunger
◆	45	P-64240 O-Ring
◆	46	AS-21014 Trigger Assembly
◆	47	P-07327 Trigger Pin
◆	48	P-24307 Screw
◆	49	P-32170 Washer
◆	50	P-26142 Nut
◆	51	P-13046 Bracket
◆	52	P-12450 Magazine Cover
◆	53	P-18131 Spring Clip
◆	54	P-18132 Negator Spring
◆	55	P-12451 Magazine
◆	56	P-03053 Spacer
◆	57	P-09201 Pusher
◆	58	P-24319 Screw
◆	59	P-24310 Screw
◆	60	P-64434 O-Ring
◆	61	AS-04036 Latch Assembly
◆	62	P-07356 Step Pin
◆	63	P-07353 Spiral Pin
◆	64	AS-53061 No Mar Tip Assembly
◆	65	P-96129 No Mar Tip
◆	66	P-32227 Washer
◆	67	P-26165 Nut

◆ Parts Included In AS-97310 O-Ring And Seal Kit